




SU-15 INSIDE CAN BE OPEN


SERIES	INNER H.	INNER WIDE	OUTER H.	OUTER WIDE	R	OPENING	HOLE DIS OF CONNECTOR	CONNECTOR ART. NO.
15	15	15	20	23	28 38 48	BF.N	A=8	15.15.BF.N.12PZ
15	16	20	20	29		BF.N	A=8	15.20.BF.N.12PZ
15	15	30	20	39		BF.N	A1=22 B=9.2	15.30.BF.N.12PZ
15	15	40	20	49		BF.N	A1=31.8 B=7.5	15.40.BF.N.12PZ
15	16	60	20	69		BF.N	A1=41.8 B=7.5	15.50.BF.N.12PZ

Instruction chart

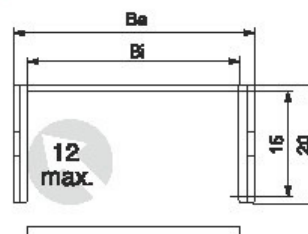

TECHNIC

DIS. = 20mm, SECTION/METER = 50, LENGTH = $S/2 + K$, S = TRAVEL DIS, K = □.R+ SAFE R

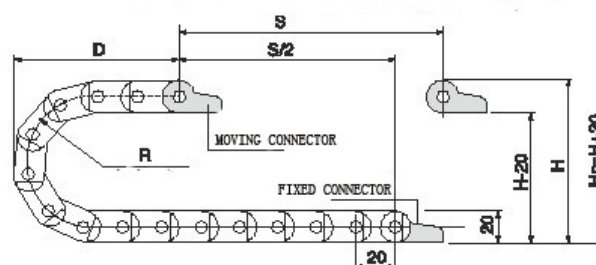

R	28	38	48
H	78	98	118
D	60	70	80
K	130	160	190

INSTAL HEIGHT $H_c = H + 15mm$ (LOAD 0.2kg/m)

CONNECTOR INSTALL

